

NO TOOLS REQUIRED

for Leveling Perfection!

EZ Level System

Cellular & Pleated Shades

EZ Level makes quick work of leveling without cords to cut or tuck into a rail.

- No special tools needed – just use a nickel, quarter or penny to adjust plug on the bottom rail.
- Works on middle and bottom rails.

EZ Level is standard on all Cellular and Pleated Shades with the following hardware:

- Universal and Universal Deluxe Rail Standard Rectangular
- Cordless Ultra
- Continuous Cord Loop
- ComforTrack™ and SlumberShade™
- Somfy® and Simplicity Motorized Systems
- Top Down-Bottom Up with Standard Rectangular, Continuous Cord Loop and Cordless hardware

How does EZ Level work?

- Slightly raise the rail you want to level (the bottom rail on standard shades or the middle rail on a top-down shade).
- Insert a coin or flat head screwdriver into the adjustment screw and turn it.
- Turn the adjustment screw clockwise or counter clockwise to make slight adjustments up or down. One quarter turn of the adjustment screw will move the bottom rail up or down 1/4".
- Lower the rail to check the level and make further adjustments if necessary.

Amanda, Satisfied Customer



You can find us on YouTube. Search for Comfortex Videos.

 **Comfortex**
WINDOW FASHIONS

21 ELM STREET | MAPLEWOOD, NEW YORK 12189
(800) 843-4151 | FAX (800) 336-4580
WWW.COMFOTEX.COM | WWW.COMFOTEXDEALERS.COM