

Replacing a Cord Tilt or Wand Tilt Mechanism

1. For wand tilt, remove the wand. For cord tilt, cut the tassels off the cords.
2. Remove the headrail end stiffener from the end opposite the tilt control.
3. Slide the tilt rod out of the tilter, being careful not to pull it out of the tape drums
4. The tilter snaps under the lip of the headrail at the back of the blind. Push the tilter to the end to free it from the headrail. Lift straight out.
5. For wand tilter:
Drop the new mechanism into the hole and snap back under the lip of the headrail.

For loaded cord tilter:

Feed each cord and down through the holes in the tilter base.

Feed both cord ends through the punched hole in the rail.

Snap tilter into place under the lip of the headrail.

Slide tassels onto cord and tie knot into cord at desired length.

Trim extra cord.

6. Slide rod back through tilt mechanism and reinstall headrail end stiffener.

